


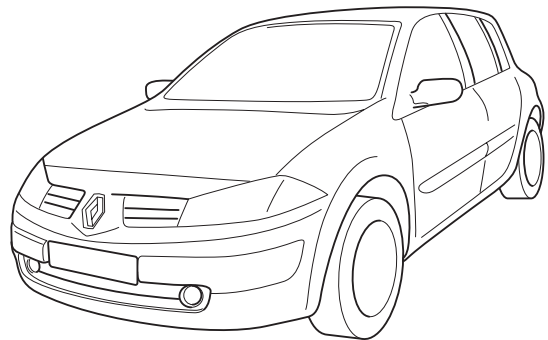

1 987 432 093

Renault Megane II

11.02 →

(D) Innenraumfilter
Montageanleitung

(NL) Interieurfilter
Montagehandleiding

(GB) Cabin filter
Installation instructions

**(E) Filtro ventilacion
para interior**
Instrucciones de montaje

(F) Filtre d'habitacle
Notice de montage






**(P) Filtro de purificação
do habitáculo**
Instruções de montagem

(I) Filtro abitacolo
Istruzioni di montaggio

(S) Kupéfilter
Installationsanvisning

BOSCH



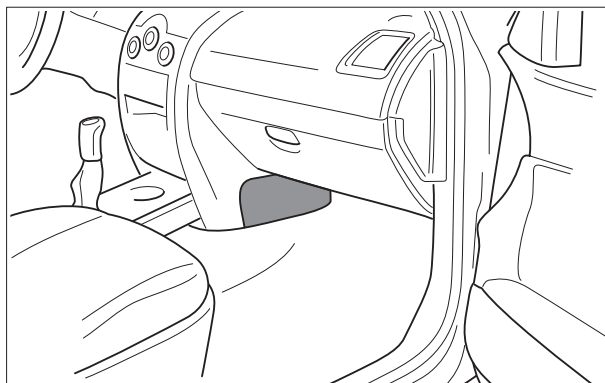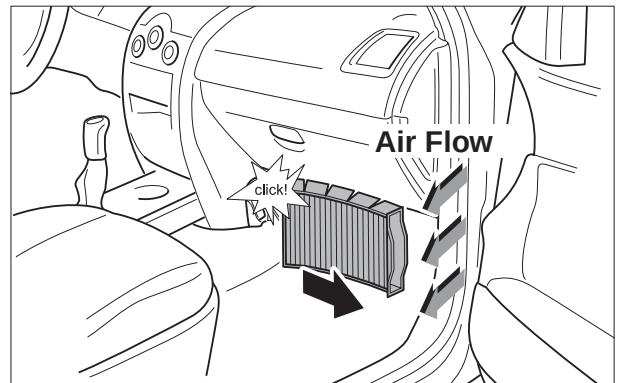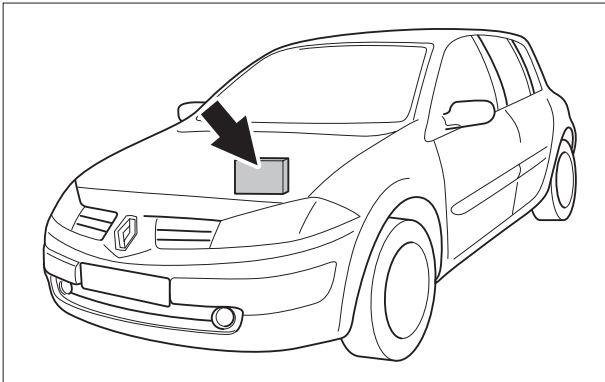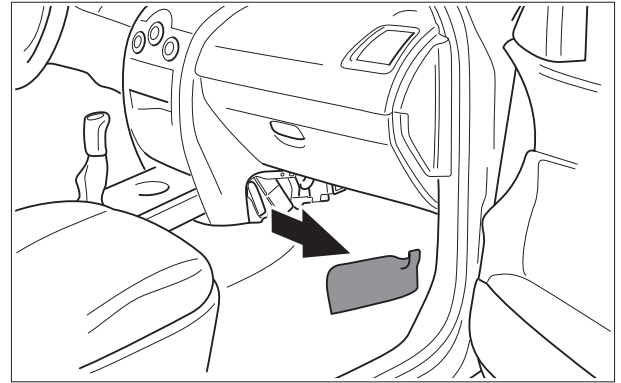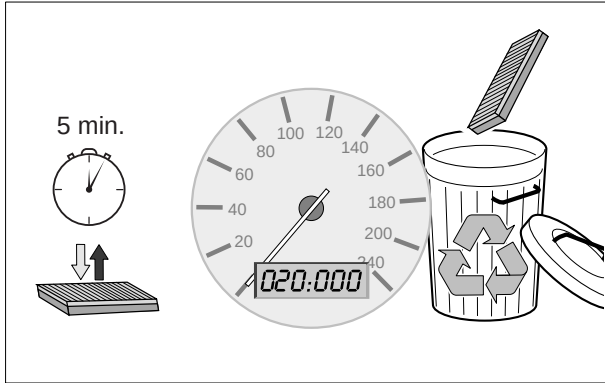



Service

+49 (0) 180-500 4745

gebührenpflichtig/subject to charges/payant



Robert Bosch GmbH
Postfach 41 09 60, D-76225 Karlsruhe
www.bosch-automotive.com



Gedruckt auf Recycling-Papier Printed in Germany
Printed on recycled paper Imprimé en Allemagne